

Issue 2024.5.10

No. T712801Re

8bit system Read System ID reader **Z5-AA01N-_**_ **Z5-AA01P-_**_ Manual



B&PLUS

Contents

1. Description
1.1. Description
1.2. System configuration · · · · · · · · · · · · · · · · · · ·
1.3. 8bit system format ••••••••••••••••••••••••••••••••••••
2. Specifications · · · · · · · · · · · · · · · · · · ·
3. Installation and Wiring • • • • • • • • • • • • • • • • • • •
4. Communication with the External Unit · · · · · · · · · · · · · · · · · · ·
5. Error Detection · · · · · · · · · · · · · · · · · · ·
6. Appropriate Datacarrier and Read distance of 8 bit Reader • • • • • • • • • • • • • • • • 8

Safety Considerations

(Please read this before use)

Before using this products, read this manual carefully and operate properly, paying attention to the safety aspects.

Design considerations

- ◆ 8bit reader together with Datacarrier which are specified by ISO15693 standard comprise the Identification System and may only be used for this purpose inindustrial applications.
- Even if the abnormality of power supply and this product break down, please design the system so that the whole system acts on the safe side.
- ♦ About power supply and using conditions, be careful not to exceed the range of specifications. Usage considerations
- Use a regulated power supply, e.g. switch-model type. There is a risk of fire or heat generation exceeds the rated voltage power is being supplied"
- "When wiring the processor, follow the chapters containing the wiring diagramsclosely, and wire all connections properly.Incorrectly connected wiring may cause malfunction or unexpected problems."
- Be sure to turn off the power before cleaning, maintenance and failure treatment.
- igodold Do not disassemble or modify the processor. Which may cause failure,malfunction, injury or fire.
- To avoid malfunction caused by induction noise, cable should be kept apart from motor or other power cable.
- \blacklozenge When disposing of the processor, treat it as industrial waste.



1. Description

1. 1 Description

8 bit system is a simple identification system communicating 8 bit data.

This Read-Only system needs no particular program to read data, for the ID reader reads data of a Datacarrier automatically when the Datacarrier come into the reading area of the ID reader.

Datacarrier are used for 8bit system. 8bit system occupies the first three bytes of memory. The first byte (8 bits) is used for customer's identification data, the second and third bytes are used for data check function by ID reader.

1.2 System configuration



Data carrier ID reader

Host device

- Reader start reading automatically as soon as a Datacarrier comes into its communication area .

- Reader outputs the read data in 8 bits parallel.

Used frequency / 13.56MHz

1.3 8bit system format

8bit system uses Datacarrier which are specified by ISO15693 standard.

Data of this system is stored in a Datacarrier by 8bit format.

User's data 8 bits are set in address 00 of a Datacarrier. The inverted bits of the user's data are written in 01 and 02 address. Reader compares three data which are stored 00, 01 and 02 address.

The result of checking is true, Reader outputs 8 bits as the reading data and 1 bit as the data-valid.

If the result is false, LED of Reader blinks slowly as data check error. In this case, all outputs remaind same.

[Example]

	Data bit No.					lo.	Writing data	Check data		
	7	6	5	4	3	2	1	0	winning uata	
OOH address	0	0	0	0	0	1	0	0	04H	-
01H address	1	1	1	1	1	0	1	1	-	FBH
02H address	1	1	1	1	1	0	1	1	-	FBH

B&PLUS


2. Specifications

Specification

Type code	Z5-AA01N	Z5-AA01P			
Output	NPN output	PNP output			
Power supply	24V DC +10 / -20% (including r	24V DC +10 / -20% (including ripple)			
Current consumption	max.60mA				
Operating temperature	0+50℃				
Operating humidity	3590%RH				
Protection class	IP 67				
Vibration rating	10…55Hz,amplitude 1.5mm,to each axis X-Y-Z for 2 hrs.				
Shock rating	50G, 3 times to each axis X-Y-Z,total 18 times				
Metal mounting	Yes(Not Flush)				
Housing material	case : Nickel plated brass A	ctive surface : Nylon 12			
Standard	CE				
Cable	PUR, Phi 7.7 / 2 x 21AWG + 9 x 25AWG				
Weight	180g+Cable 70g/m				
	The ID reader has built-in module that use high frequency which acquired type designation(AC-17102				
	/ type code PCB70/Z5-AA01N or AC-17101/type code PCB70/Z5-AA01P).				

Dimension

Z5-AA01N-__ Z5-AA01P-__

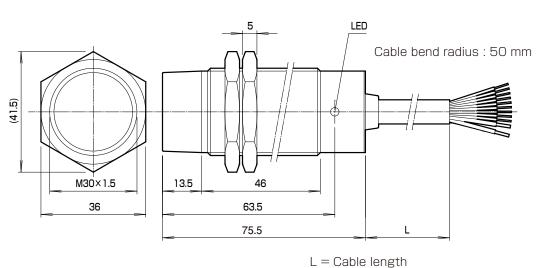

Standard : 2m (Max 25m)

LED status

Data Valid	Color	Description of the functions
Output		
None	Green	(1) Datacarrier present and data are valid (LED : ON).
		(2) Data check error happens (LED : Slow blinking)
		 (3) Any of those "ON" output signals that indicate Read data or Data valid is short circuit. (LED : Fast blinking)


Output specification

Load voltage	30V DC (max.)
Load current	50mA (max.)
Residual voltage	≦ 1.5V
Leakage current	≦0.08mA

Output circuit


NPN type: Z5-AA01N-__

Reader

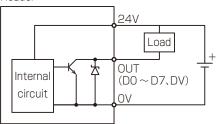

PNP type : Z5-A001P-__

Reader

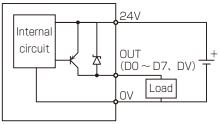

Output signal

Signals	1/0	Cable	Meaning
		color	
Power supply 24 V	-	White	Connect (+) side of the 24V DC Power supply
Power supply O V	-	Pale Blue	Connect (-) side of the DC24V Power supply
Read Data DO	Out	Brown	Output signal of data from bit address O
Read Data D1	Out	Red	Output data read from Bit address [1]
Read Data D2	Out	Orange	Output data read from Bit address [2]
Read Data D3	Out	Yellow	Output data read from Bit address [3]
Read Data D4	Out	Green	Output data read from Bit address [4]
Read Data D5	Out	Blue	Output data read from Bit address [5]
Read Data D6	Out	Violet	Output data read from Bit address [6]
Read Data D7	Out	Gray	Output data read from Bit address [7]
Data valid DV	Out	Black	Output signal that indicates the read data is valid

B&PLUS

 
3. Installation and Wiring

Installation

[Installation of Reader]

Install the Reader on flange with M30 nuts which supplied together with the Reader.

(Tightening torque: 20 Nm)



The cirtain clear zone is required around the active surface to avoid influence of surrounding metal.


	А	В
Z5-AA01N Z5-AA01P	20mm	20mm

Wiring

[NPN type]

[Mutual interference]

 
The following distances must be maintained between the individual Reader to avoid mutual interference.





ie]	External Power Unit 24V DC (+) (-)	
Reader Z5-AA01N	White Host device Pale Blue Data Input DO Brown Data Input D1 Orange Data Input D2 Yellow Data Input D3 Green Data Input D4 Blue Data Input D5 Violet Data Input D7 Black Data valid DV + common for input	

[PNP type]

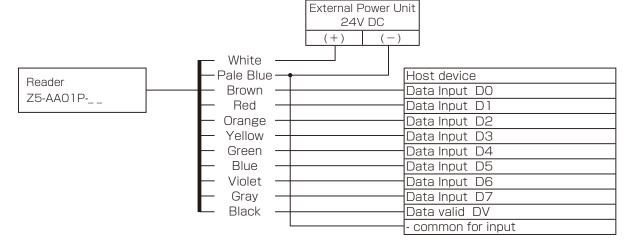

[Attention]


- When connecting user's cable to Reader, be sure to use the cable of which conductors are bigger than 0.5 mm² for power supply line (white, pale blue) and 0.2 mm² for signal line (brown ... black).



4. Communication with the External Unit


Data Reading

[Timing chart 1]

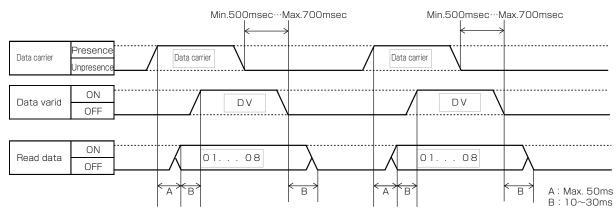

[Timing chart 2]

While the ID tag holds the output data, if the ID tag has entered a communication range

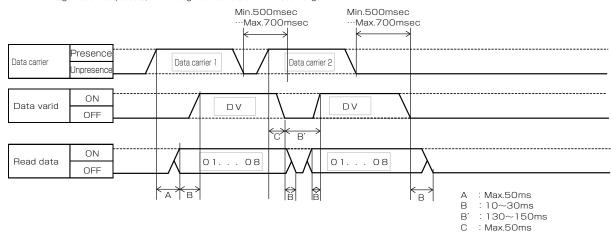

[Procedure for Communication]

- (1) Reader reads the data of the Datacarrier automatically as soon as the Data carrere comes into the communication area of the ID reader and set the read data.
- (2) The host computer should start reading from D0 to D7 of Reader after checking the data valid signal turns ON.

≪ Note ≫


- Data reading should be carried out at interval longer than 50 msec second In reading data of Datacarrier continuously.
- When data check error occurred, the data valid (DV) remains OFF, and the read data (D0...D7) would not Output. In this condition,LED of data valid (DV) would be blinking (slow).

5.Error Detection

Error description	LED indication	Output signal
Data check error (Chack data collision)	Blinking (slowly)	Data varid : OFF
No Datacarrier	OFF	Data valid : OFF
Short of Output signals.	Blinking (Quickly)	-

8-bit system Reader

 6. Appropriate Datacarrier and Read distance of 8 bit Reader



- To avoid the surrounding metal and mutual interference when you install
- ID reader, please keep area greater than or equal to value shown in below table.
- "Metal mounting" means directly mounted on the metal. but it refers to the absence of metal around except rear of the Data carrier.
- "Non-metal mounting" that ensures a certain distance over the back side of Datacarrier and Metal.
- Communication distance, axis offset value are all reference values.

Type code : Z1-CB16-112



		ivon-metailic a	rea(A · 70mm)
Mounti	ng	Metal mounting(C:Omm)	Non metal mounting(C:20mm)
Commu distance		impossible	020
Center offset	Destance Omm	_	± 10
(mm)	4mm	_	± 10
	8mm	_	±11
	12mm	_	±11
	16mm	_	±9
	20mm	_	± 5

Type code : Z1-CE	327-112
Type code : Z1-CE Size : <i>φ</i> 27 x 0.76 mr	n
1	CR2
010	and the second sec
	Non motollio prog(A · 70
	Non-metallic area(A : 70

		Non-metallic a	rea(A:70mm)
Mounti	ing	Metal mounting (C:Omm)	Non metal mounting(C:20mm)
Communication distance (mm)		impossible	028
Center offset	Destance Omm	_	±13
(mm)	4mm	—	±13
	8mm	_	±15
	12mm	_	±15
	16mm		±15
	20mm	_	±14
	24mm		± 12
	28mm	_	± 7



SAPLUS

viouriting		mounting(C:Omm)	mounting(C:20mm)
Communication distance (mm)		impossible	040
Center offset	Destance Omm		± 20
(mm)	8mm	_	± 20
	16mm	_	±21
	24mm	_	±21
	32mm	_	± 18
	40mm	—	± 9

Type code : Z1-BB10-112 Size : <i>φ</i> 10 x 0.76 mm						
	(0				
		Non-metallic a	rea(A:70mm)			
Mounti	ing	Metal mounting(C:Omm)	Non metal mounting(C:20 mm)			
Communication distance (mm)		05	08			
Center	Destance Omm	± 6	± 7			
offset	2mm	± 5	± 7			
(mm)	4mm	± 3	± 6			
	5mm	± 3	± 6			
	6mm	_	± 5			
	8mm	_	±3			

Type code : Z1-AA04-02K

Size : 30 × 30 × 6 mm



		Non-metallic area(A : 70mm)		
Mounting		Metal mounting (C: Omm)	Non metal mounting (C: 20mm)	
Communication distance(mm)		012	016	
Center offset	Distance Omm	± 7	± 9	
(mm)	4mm	± 8	±10	
	8mm	± 8	±10	
	12mm	± 0	±9	
	16mm	_	± 0	

Type code : Z1-B011-128 Size : φ 50 x 8.3 mm



distance (mm)		0 - 12		0 - 22	
Center offset (mm)	Destance Omm	±17	±9	±19	±11
	4mm	±15	±8	±19	±12
	8mm	±10	±6	±18	±12
	10mm	±6	±4	±17	±12
	12mm	±Ο	±Ο	±16	±12
	16mm	-	-	±13	±9
	20mm	_	_	±6	±4
	22mm	-	-	±Ο	±Ο

Z1-B011-128 has different offset depending on the moving direction of Data carrier.

When it's installed as described below, up and down movement means vertical direction, left and right movement means lateral direction



Width-ways